



# Skytex SP728 Screen Replacement

How to replace the front screen.

Written By: Michelle Strickland



## INTRODUCTION

This guide will show how to take the device apart and how to identify components that need to be removed to replace the screen.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Case



- Make sure the device is powered off
- Rotate the device so the ports and screws face you

## Step 2



- Using a small phillips screwdriver, unscrew both end screws

## Step 3



- Using a plastic opening tool, work your way around the edge of the device, separating the case from the rest of the device


## Step 4



- Once the case has been loosened, pry the backing off gently with your hands.
- ⚠ Make sure to remove the case gently as extra force can break the clasps or the case itself.





## Step 5 — Screen

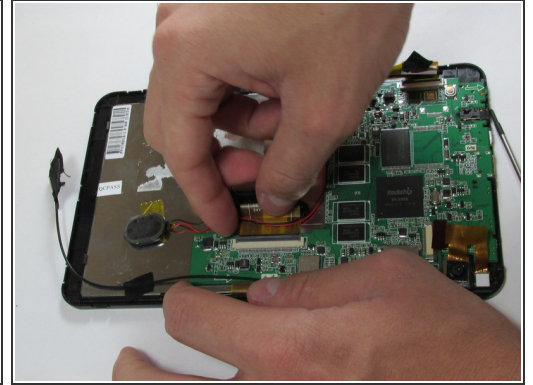


- Follow the [Case Replacement](#) to separate the tablet from its backing
- Using a small Phillips screw driver, unscrew all screws connecting circuit board to device
- Remove all tape connecting battery and circuit board to front case
- Detach all connector strips from the circuit board

## Step 6

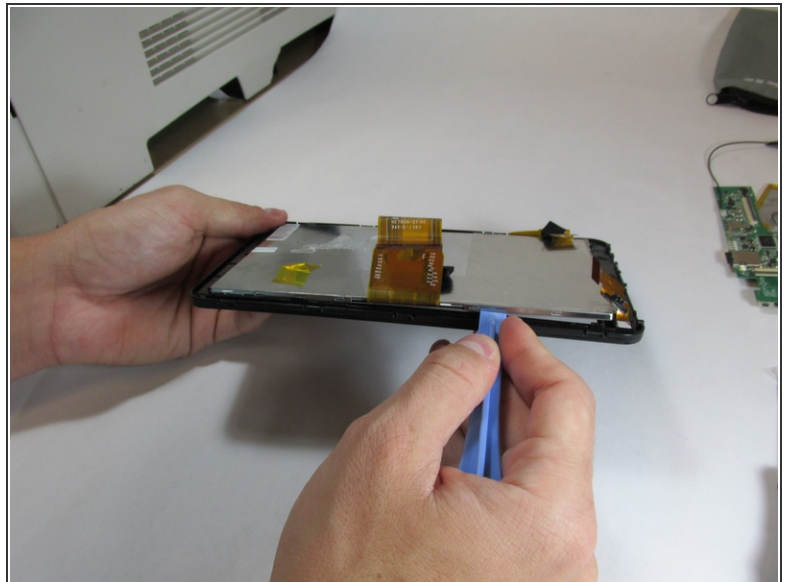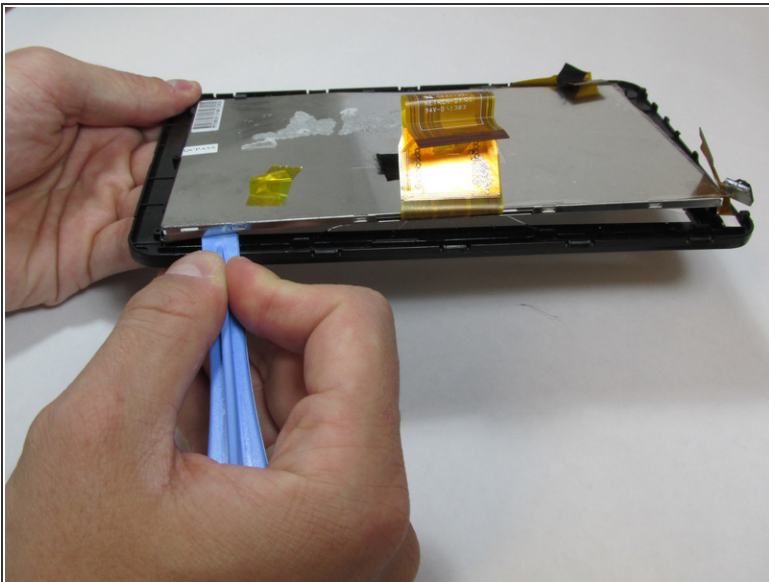

- Using the plastic opening tool, begin separating the front screen from the display

## Step 7

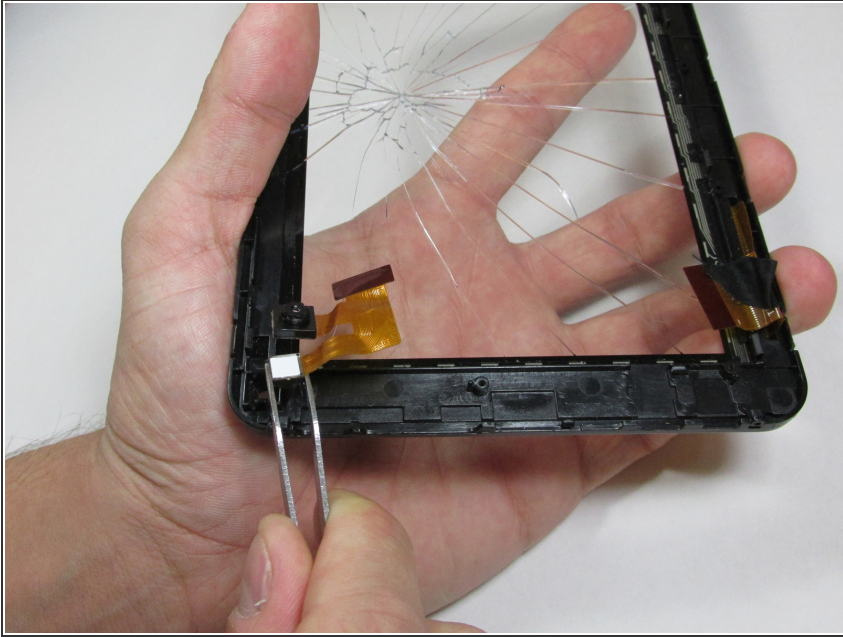

- Once screen has been separated, use tweezers to remove front camera

---

To reassemble your device with a new screen, follow these instructions in reverse order.

This document was last generated on 2017-06-25 06:56:40 AM.